



Classroom Touch Panel

1. **Blank Screens** - Black out the classroom displays
2. **Shutdown** - Access the shut down menu to end class
3. **Camera Control** - Camera selection and controls
4. **PC** - Instructor Computer content
5. **Laptops**- Content from laptop/tablet connected with HDMI cable
6. **Wireless** - Wireless presentation content
7. **Volume** - Volume control slider

Turn on System

Touch anywhere on the main standby screen

Select a Source

Tap the desired source icon from the center of the interface

Adjust Volume

Press the “up” and “down” arrows to adjust the system volume
Tap the speaker button below to mute and unmute the system

Turn off System

Tap Shutdown  icon in upper right corner of interface
Tap “YES” when prompted to power off system

USERNAME: GMUCLASS
PASSWORD: GMUSpring2026

Classroom Features

- Instructor computer
- Wireless presentation (see additional instructions)
- Computer monitor
- Camera for web conferencing

For more information, visit the GMU Stearns Center website:

<https://stearnscenter.gmu.edu>